



### **Digital Megohm Meter**

Weshine® invented the Digital Megohm Meter with CE certificate, high quality and accuracy, Invented and produced according to national standards, complete electric testing solution available. Contact us for more details of Digital Megohm Meter from Weshine!



Weshine® VS-3121A is a battery powered **Megohm Meter Test** with digital and analogue arc display, designed for high voltage insulation resistance testing in the maintenance and servicing of cables, rotating plant machinery, transformers, switchgear and industrial applications.

DC insulation tests are performed at 250 V, 500 V, 1000 V, 2500 V, 5000 V. Insulation resistance measuring range is 100 k  $\Omega$  to 1000 G  $\Omega$ . Automatic discharge for capacitive circuits under test is provided and decaying voltage displayed.

The guard terminal can be used to minimize the effects of surface leakage and hence erroneous measurements when carrying out insulation resistance tests.

For capacitive test objects the instrument will automatically discharge through an internal resistor and indicate voltage across the terminals in the range 30 V to 600 V with higher voltages indicated by 'Hi'. This feature will give decaying voltage indication following the testing of reactive loads. When the voltage indicator disappears it is safe for the user to disconnect the test leads.

Weshine Electric Manufacturing Co., Ltd.

Address:Diangu Technology Center, No. 3088, Lekai North Street

Tel:+86-312-3188565

E-mail:sale09@weshinelectric.com

Phone:+86-18731260588



www.weshineelectric.com

Weshine® VS-3121A Megohm Meter Test is powered by eight 1.5 V IEC LR6 (AA) cells. Design safety features include high voltage warning indicator, external voltage display after IR test, automatic discharge of reactive loads and test leads

## APPLICATION

Electrical insulating materials deteriorate with time leading to breakdowns and costly repair bills. Insulation resistance testers apply a regulated DC voltage across the insulation and measure current flow through it applying Ohm's law to calculate insulation resistance. The current flows because no insulation material is perfect.

IR tester uses include:

- Product test and qualification
- Installation of equipment
- Routine maintenance
- Problem resolutions

Insulation testing with high voltage DC affects insulation polarisation such that consecutive testing without complete discharge of the unit under test will yield different results.

Care should be taken to always employ the same process and technique of connecting to and testing an insulator to be able to trend results. It is important to record temperature of the insulation as well as IR values

## FEATURES AND BENIFITS

- Compact, rugged insulation resistance tester
- Easy operation and voltage range selection
- AC and DC voltmeter (30 V - 600 V)
- User settable IR test timer (default 1 min), (max. 19 m 50 s)
- Soft carry case for instrument and leads
- Quick start and full user guide
- Locking HV insulated plugs for additional safety
- Shutters across terminals prevent accidental ingress of dirt and other objects

## SPECIFICATIONS

Insulation range	0.1 MΩ to 2 TΩ
Nominal test voltages	250 V, 500 V, 1000 V, 2500 V, 5000 V
Terminal voltage accuracy	
	<1000 V 0...+10% of nominal test voltage
	≥1000 V 0...+5% of nominal

Weshine Electric Manufacturing Co., Ltd.

Address:Diangu Technology Center, No. 3088, Lekai North Street

Tel:+86-312-3188565

Phone:+86-18731260588

E-mail:sale09@weshineelectric.com

	test voltage
Insulation accuracy	±5% ±3 digits
Short circuit current	5 mA ±0.5 mA
Voltmeter accuracy	±2%rdg±3dgt
Power supply	8 x LR6/AA batteries
Operating temperature range and humidity	
	- 20°C to +45 °C
Humidity	80% RH
Storage temperature range and humidity	
	-20 °C to +60 °C
Safety protection	Insulation Cat III 600 V
Note	Service error with stated environmental limits is twice intrinsic error
EMC	Conforms to IEC 61326-1:2013
Dimensions	177 mm x 226 mm x 100 mm
Weight	1.9 kg(include the battery)


## VS-3121

The VS-3121 **Megohm Meter Test** has been designed for Electrical and Industrial test applications, where operation voltages exceed 1000 V and higher insulation test voltages are required.

Unlike the VS-3121A, the VS-3121 offers fixed range voltages of 50 V, 100V, 250 V, 500 V, 1000 V and 2500 V.

Equipment with operating voltages above 1 kV requires commensurately higher test voltages. To be in full conformance with the most modern testing requirements, Weshine offers a family of high-quality **Megohm Meter Tests** at voltages above 1 kV. At the core of high-voltage testing, our 5/10/15 kV units afford the highest level of quality testing along with prime safety, convenience and portability.

For complete insulation testing capability of all high-capital equipment, Weshine goes one step further! The universal testing standard for rotational equipment, IEEE 43-2000, increased the test voltage recommendation to 10 kV for equipment rated 12 kV and above. Full compliance with this standard can be attained with just one tester, our 10 kV model.

	<p>VS-3127</p> <p>The VS-3127 <b>Megohm Meter Test</b> offers the ability to perform accurate insulation resistance measurements up to 15 kV test voltage with a maximum resistance of 30 TΩ. Resistance measurement accuracy is ± 5 % from 1 MΩ to 3 TΩ!</p> <p>For utilities and service companies the VS-3127 is an all-around tester with its flexibility and future proofing capability. The Weshine VS-3127 is designed to work wherever you work.</p> <p>Output rated voltage max reach 7 gears (250V, 500V, 1KV, 2.5KV, 5KV, 10KV, 15KV).</p> <p>Max short circuit current 7mA</p> <p>Insulation resistance test (IR), polarization index test (PI), dielectric absorption ratio test(DAR). Ramp test mode (RAMP), filtered resistance test mode (FR). *Capacitance Test (Cap.).</p> <p>Voltage monitor function, automatically monitoring the live voltage of the measured</p>
---	---

## WHY TEST AT 15 KV?

5 kV to 15 kV will triple test current - this can prevent negative test current in the presence of high noise.

15 kV is specified for assets of 35,000 V to 69,000 V based on NETA ATS 2007.

Motors above 34,500 V should be tested at 15 kV based on NETA ATS 2007.

## SPECIFICATIONS

Insulation range	0.1 MΩ to 30 TΩ
Nominal test voltages	250 V, 500 V, 1 kV, 2.5 kV, 5 kV, 10 kV, 15kV
Terminal voltage accuracy	(5%~10%) ±10V
Insulation accuracy	1 MΩ to 3 TΩ, ±5% ±3 digits > 3 TΩ, ±20% ±3 digits
Short circuit current	≥7 mA ±0.5 mA
Ramp test mode	±2%rdg±3dgt
Power supply	Step up to the preset voltage by testing with 10% stepped size of preset voltage
Operating temperature range and humidity	- 20°C to +50 °C
Humidity	80% RH

Weshine Electric Manufacturing Co., Ltd.

Address:Diangu Technology Center, No. 3088, Lekai North Street

Tel:+86-312-3188565

Phone:+86-18731260588

E-mail:sale09@weshineelectric.com

Storage temperature range and humidity	
	-25 °C to +65 °C
Voltage test	AC/DC:0V~1000V, Accuracy: $\pm 5\%rdg \pm 3V$
Capacitance test	10nF~25uF, Accuracy: $\pm 10\%rdg \pm 10nF$
Current test	0.01nA~7mA, Accuracy: $\pm 5\%rdg \pm 0.5nA$
Safety protection	Insulation Cat III 600 V
Note	Service error with stated environmental limits is twice intrinsic error
EMC	Conforms to IEC 61326-1:2013
Dimensions	280 mm x 260 mm x 160 mm
Weight	4.9 kg(include the battery)



# High Voltage Insulation Tester

5KV

0.1M-2TΩ




## Features

**Durable and high-quality materials**

Beautiful and high-grade, wide range, high resolution, split operation, accuracy, reliability, stable performance and strong anti-interference ability.

## Main characteristics

- IEC60010 standard





• **DAR&PI function**


• **5 mA short-circuit current**

# PRODUCT INTRODUCTION

**Bar chart and numeric double display**





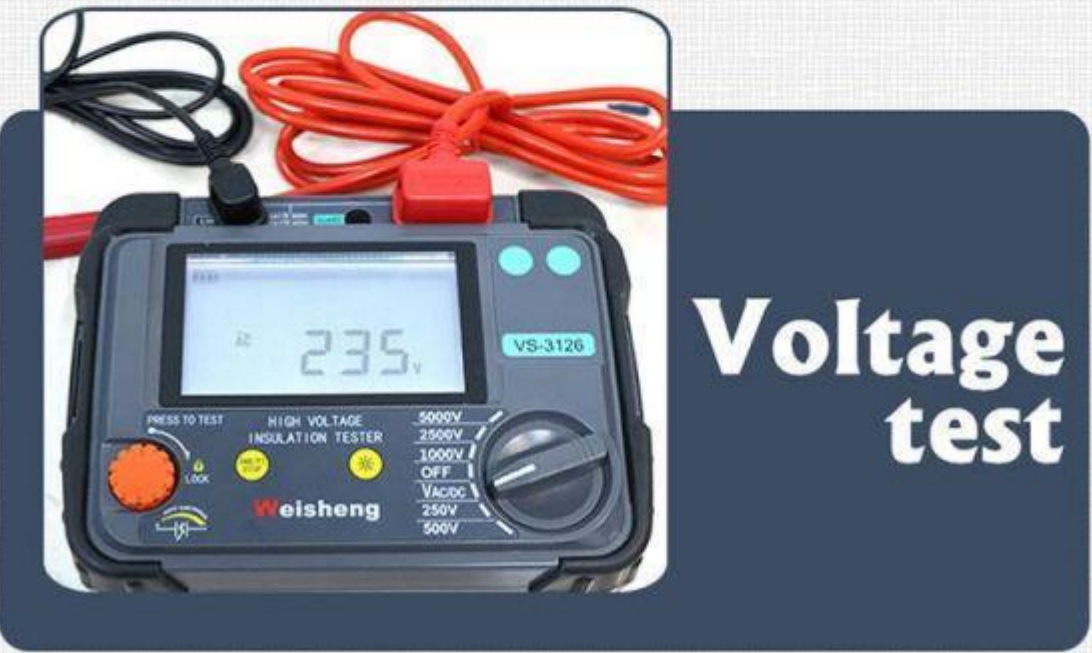

## Equipment Volume:





## Portable case volume:



# EQUIPMENT ACCESSORIES

## Detail List:

<b>1</b>	<b>Host machine</b>	<b>1 pc</b>
<b>2</b>	<b>High voltage wire</b>	<b>1 pc</b>



2	High voltage wire	1 pc
3	Ground wire	1 pc
4	Guard wire	1 pc
5	Portable case	1 pc



# LOCATION SHOOT

Accurate and reliable



## Selections

Weshine has 8 years of experience specifically for deal with complete range of Electrical Equipment. At present, Weshine has invented various **Megohm Meter Test** for each step as shown as form:

ORDERING INFORMATION FOR <b>Megohm Meter Test</b> S						
Cat. No.	Max Test Voltage	Max Test Range	IR/PI/DAR	RAMP	FR	Cap.
VS-3121	2.5 kV	100 GΩ	√			
VS-3121A	5.0 kV	20 TΩ	√			
VS-3125	5.0 kV	10 TΩ	√	√	√	
VS-3125A	5.0 kV	10 TΩ	√	√	√	√
VS-3126	10.0 kV	20 TΩ	√	√	√	
VS-3126A	10.0 kV	20 TΩ	√	√	√	√
VS-3127	15.0 kV	30 TΩ	√	√	√	√

Based on Supply Chain issues: Please contact your preferred Authorized Weshine Distributor for current pricing and lead times.

## Quality Certificates

We always believe that all the success of our company is directly related to the quality of the products we provide. **Megohm Meter Test** meet the highest quality requirements specified in ISO9001, ISO14000:14001 guidelines and our strict quality control system.



## Shipment

Weshine Electric Manufacturing Co., Ltd.

Address: Diangu Technology Center, No. 3088, Lekai North Street

Tel: +86-312-3188565

Phone: +86-18731260588

E-mail: [sale09@weshineelectric.com](mailto:sale09@weshineelectric.com)





For further information on Weshine's Service Solutions, contact our 24/7 online sales representative to get quotes from Weshine.

## Contact us

<b>FEEL FREE TO MAKE A PHONE CALL:400 996 1868</b>	<b>OR E-MAIL TO: <a href="mailto:info@weishengelectric.com">info@weishengelectric.com</a></b>
<b>SALES OFFICE</b> Weshine Limited 602, Building 3, Diangu Technology Center, No. 3088, Lekai North Street W/app: +86 1873 1260 588 E. <a href="mailto:info@weishengelectric.com">info@weishengelectric.com</a> <a href="mailto:sale01@weishengelectric.com">sale01@weishengelectric.com</a>	<b>CONTACT OFFICE</b> T. 0312 3188565 E. <a href="mailto:bdweisheng@weishengelectric.com">bdweisheng@weishengelectric.com</a>  <b>AFTER-SALES SERVICE</b> T. +86 157 1252 6062



Weshine VS-3121A is a battery powered **Digital Megohm Meter** with digital and analogue arc display, designed for high voltage insulation resistance testing in the maintenance and servicing of cables, rotating plant machinery, transformers, switchgear and industrial applications.

DC insulation tests are performed at 250 V, 500 V, 1000 V, 2500 V, 5000 V. Insulation resistance measuring range is 100 k  $\Omega$  to 1000 G  $\Omega$ . Automatic discharge for capacitive circuits under test is provided and decaying voltage displayed.

The guard terminal can be used to minimize the effects of surface leakage and hence erroneous measurements when carrying out insulation resistance tests.

For capacitive test objects the instrument will automatically discharge through an internal resistor and indicate voltage across the terminals in the range 30 V to 600 V with higher voltages indicated by 'Hi'. This feature will give decaying voltage indication following the testing of reactive loads. When the voltage indicator disappears it is safe for the user to disconnect the test leads.

Weshine Electric Manufacturing Co., Ltd.

Address: Diangu Technology Center, No. 3088, Lekai North Street

Tel: +86-312-3188565

E-mail: sale09@weshineelectric.com

Phone: +86-18731260588

The VS-3121A **Digital Megohm Meter** is powered by eight 1.5 V IEC LR6 (AA) cells. Design safety features include high voltage warning indicator, external voltage display after IR test, automatic discharge of reactive loads and test leads

## APPLICATION

Electrical insulating materials deteriorate with time leading to breakdowns and costly repair bills. Insulation resistance testers apply a regulated DC voltage across the insulation and measure current flow through it applying Ohm's law to calculate insulation resistance. The current flows because no insulation material is perfect.

IR tester uses include:

- Product test and qualification
- Installation of equipment
- Routine maintenance
- Problem resolutions

Insulation testing with high voltage DC affects insulation polarisation such that consecutive testing without complete discharge of the unit under test will yield different results.

Care should be taken to always employ the same process and technique of connecting to and testing an insulator to be able to trend results. It is important to record temperature of the insulation as well as IR values

## FEATURES AND BENIFITS

- Compact, rugged insulation resistance tester
- Easy operation and voltage range selection
- AC and DC voltmeter (30 V - 600 V)
- User settable IR test timer (default 1 min), (max. 19 m 50 s)
- Soft carry case for instrument and leads
- Quick start and full user guide
- Locking HV insulated plugs for additional safety
- Shutters across terminals prevent accidental ingress of dirt and other objects

## SPECIFICATIONS

Insulation range	0.1 MΩ to 2 TΩ
Nominal test voltages	250 V, 500 V, 1000 V, 2500 V, 5000 V
Terminal voltage accuracy	
	<1000 V 0...+10% of nominal test voltage
	≥1000 V 0...+5% of nominal

Weshine Electric Manufacturing Co., Ltd.

Address:Diangu Technology Center, No. 3088, Lekai North Street

Tel:+86-312-3188565

Phone:+86-18731260588

E-mail:sale09@weshinelectric.com

	test voltage
Insulation accuracy	±5% ±3 digits
Short circuit current	5 mA ±0.5 mA
Voltmeter accuracy	±2%rdg±3dgt
Power supply	8 x LR6/AA batteries
Operating temperature range and humidity	
	- 20°C to +45 °C
Humidity	80% RH
Storage temperature range and humidity	
	-20 °C to +60 °C
Safety protection	Insulation Cat III 600 V
Note	Service error with stated environmental limits is twice intrinsic error
EMC	Conforms to IEC 61326-1:2013
Dimensions	177 mm x 226 mm x 100 mm
Weight	1.9 kg(include the battery)


## VS-3121

The VS-3121 **Digital Megohm Meter** has been designed for Electrical and Industrial test applications, where operation voltages exceed 1000 V and higher insulation test voltages are required.

Unlike the VS-3121A, the VS-3121 offers fixed range voltages of 50 V, 100V, 250 V, 500 V, 1000 V and 2500 V.

Equipment with operating voltages above 1 kV requires commensurately higher test voltages. To be in full conformance with the most modern testing requirements, Weshine offers a family of high-quality **Digital Megohm Meters** at voltages above 1 kV. At the core of high-voltage testing, our 5/10/15 kV units afford the highest level of quality testing along with prime safety, convenience and portability.

For complete insulation testing capability of all high-capital equipment, Weshine goes one step further! The universal testing standard for rotational equipment, IEEE 43-2000, increased the test voltage recommendation to 10 kV for equipment rated 12 kV and above. Full compliance with this standard can be attained with just one tester, our 10 kV model.

	<p>VS-3127</p> <p>The VS-3127 <b>Digital Megohm Meter</b> offers the ability to perform accurate insulation resistance measurements up to 15 kV test voltage with a maximum resistance of 30 TΩ. Resistance measurement accuracy is ± 5 % from 1 MΩ to 3 TΩ!</p> <p>For utilities and service companies the VS-3127 is an all-around tester with its flexibility and future proofing capability. The Weshine VS-3127 is designed to work wherever you work.</p> <p>Output rated voltage max reach 7 gears (250V, 500V, 1KV, 2.5KV, 5KV, 10KV, 15KV).</p> <p>Max short circuit current 7mA</p> <p>Insulation resistance test (IR), polarization index test (PI), dielectric absorption ratio test(DAR). Ramp test mode (RAMP), filtered resistance test mode (FR). *Capacitance Test (Cap.).</p> <p>Voltage monitor function, automatically monitoring the live voltage of the measured</p>
---	--

## WHY TEST AT 15 KV?

5 kV to 15 kV will triple test current - this can prevent negative test current in the presence of high noise.

15 kV is specified for assets of 35,000 V to 69,000 V based on NETA ATS 2007.

Motors above 34,500 V should be tested at 15 kV based on NETA ATS 2007.

## SPECIFICATIONS

Insulation range	0.1 MΩ to 30 TΩ
Nominal test voltages	250 V, 500 V, 1 kV, 2.5 kV, 5 kV, 10 kV, 15kV
Terminal voltage accuracy	(5%~10%) ±10V
Insulation accuracy	1 MΩ to 3 TΩ, ±5% ±3 digits >3 TΩ, ±20% ±3 digits
Short circuit current	≥7 mA ±0.5 mA
Ramp test mode	±2%rdg±3dgt
Power supply	Step up to the preset voltage by testing with 10% stepped size of preset voltage
Operating temperature range and humidity	- 20°C to +50 °C
Humidity	80% RH

Weshine Electric Manufacturing Co., Ltd.

Address:Diangu Technology Center, No. 3088, Lekai North Street

Tel:+86-312-3188565

Phone:+86-18731260588

E-mail:sale09@weshineelectric.com



Storage temperature range and humidity	
	-25 °C to +65 °C
Voltage test	AC/DC:0V~1000V, Accuracy: $\pm 5\%rdg \pm 3V$
Capacitance test	10nF~25uF, Accuracy: $\pm 10\%rdg \pm 10nF$
Current test	0.01nA~7mA, Accuracy: $\pm 5\%rdg \pm 0.5nA$
Safety protection	Insulation Cat III 600 V
Note	Service error with stated environmental limits is twice intrinsic error
EMC	Conforms to IEC 61326-1:2013
Dimensions	280 mm x 260 mm x 160 mm
Weight	4.9 kg(include the battery)

# HIGHT VOLTAGE INSULATION RESISTANCE TESTER

## 10KV 0.5M-5TΩ




## Superiority

Durable and high-quality materials


Beautiful and high-grade, wide range, high resolution, agile operation, accuracy, reliability, stable performance and strong anti-interference ability.

Ramp  
Test




Filtered  
Resistance  
Test

FR 0.0 MΩ

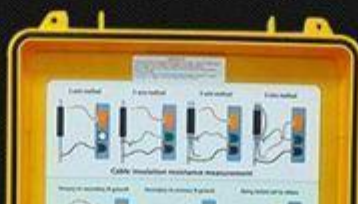



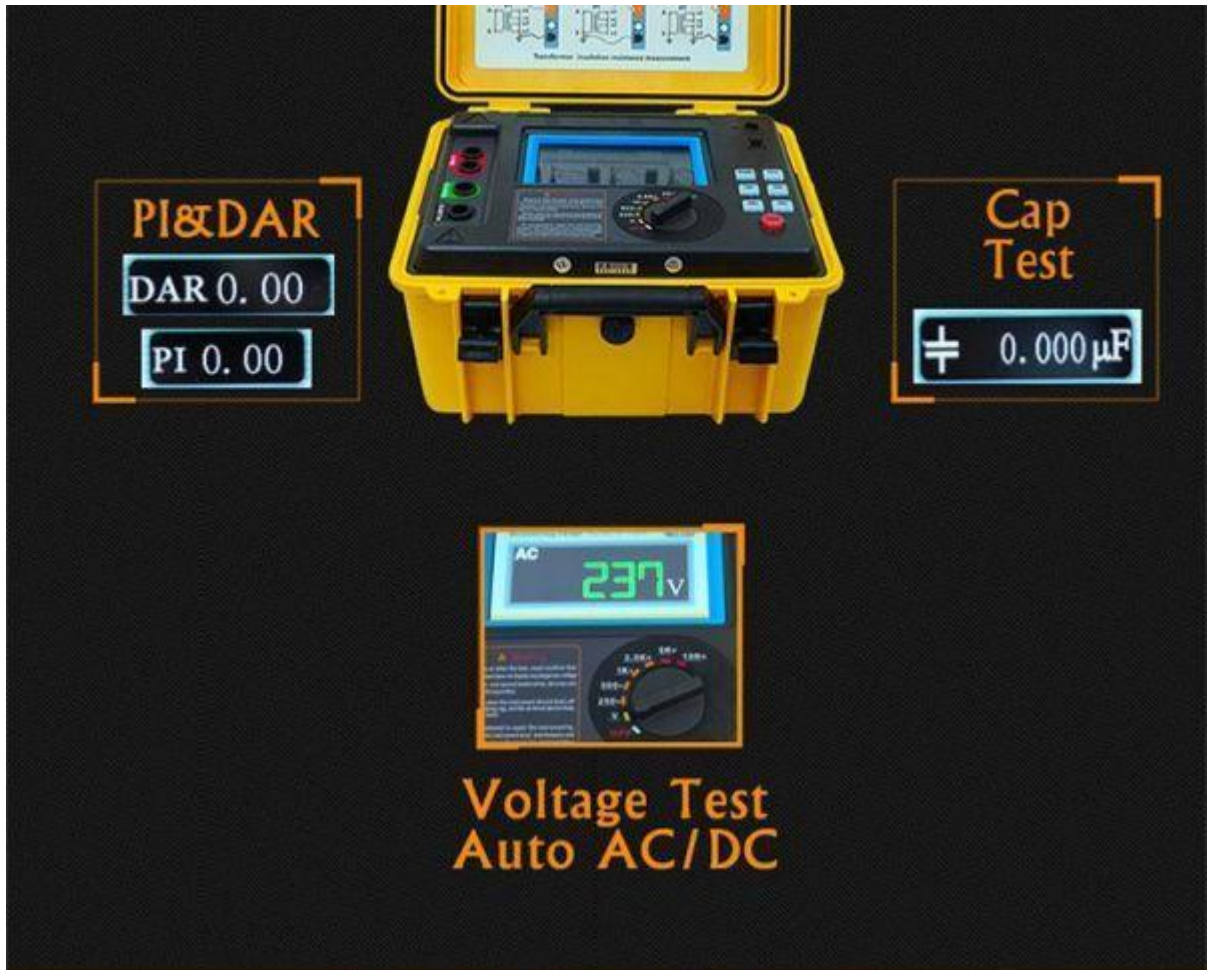

# PRODUCT PARAMETERS





## Live show

Accurate and reliable











**Voltage  
Gear Knob**

**Equipment Volume:**



**Volume of bag:**



## Selections

Weshine has 8 years of experience specifically for deal with complete range of Electrical Equipment. At present, Weshine has invented various **Digital Megohm Meter** for each step as shown as form:

ORDERING INFORMATION FOR <b>Digital Megohm Meter</b> S						
Cat. No.	Max Test Voltage	Max Test Range	IR/PI/DAR	RAMP	FR	Cap.
VS-3121	2.5 kV	100 GΩ	√			
VS-3121A	5.0 kV	20 TΩ	√			
VS-3125	5.0 kV	10 TΩ	√	√	√	
VS-3125A	5.0 kV	10 TΩ	√	√	√	√
VS-3126	10.0 kV	20 TΩ	√	√	√	
VS-3126A	10.0 kV	20 TΩ	√	√	√	√
VS-3127	15.0 kV	30 TΩ	√	√	√	√

Based on Supply Chain issues: Please contact your preferred Authorized Weshine Distributor for current pricing and lead times.

## Quality Certificates

We always believe that all the success of our company is directly related to the quality of the products we provide. **Digital Megohm Meter** meet the highest quality requirements specified in ISO9001, ISO14000:14001 guidelines and our strict quality control system.



## Shipment

Weshine Electric Manufacturing Co., Ltd.

Address: Diangu Technology Center, No. 3088, Lekai North Street

Tel: +86-312-3188565

Phone: +86-18731260588

E-mail: [sale09@weshineelectric.com](mailto:sale09@weshineelectric.com)



For further information on Weshine's Service Solutions, contact our 24/7 online sales representative to get quotes from Weshine.

## Contact us

<b>FEEL FREE TO MAKE A PHONE CALL:400 996 1868</b>	<b>OR E-MAIL TO: <a href="mailto:info@weishengelectric.com">info@weishengelectric.com</a></b>
<b>SALES OFFICE</b> Weshine Limited 602, Building 3, Diangu Technology Center, No. 3088, Lekai North Street W/app: +86 1873 1260 588 E. <a href="mailto:info@weishengelectric.com">info@weishengelectric.com</a> <a href="mailto:sale01@weishengelectric.com">sale01@weishengelectric.com</a>	<b>CONTACT OFFICE</b> T. 0312 3188565 E. <a href="mailto:bdweisheng@weishengelectric.com">bdweisheng@weishengelectric.com</a>  <b>AFTER-SALES SERVICE</b> T. +86 157 1252 6062